
PLANTING DETAILS


SEEDLING / LINER BAREROOT PLANTING DETAIL

HEALING IN

1. Locate a healing-in site in a shady, well protected area.

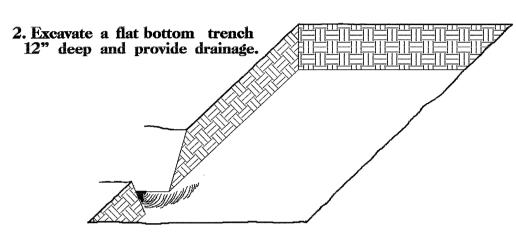


3. Backfill the trench with 2" well rotted sawdust. Place a 2" layer of well rotted sawdust at a sloping angle at one end of the trench.

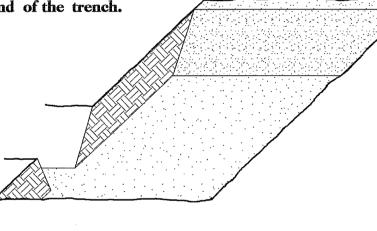


VIX VV VI V TV X Y EVY

4. Place a single layer of plants against the sloping end so that the root collar is at ground level.

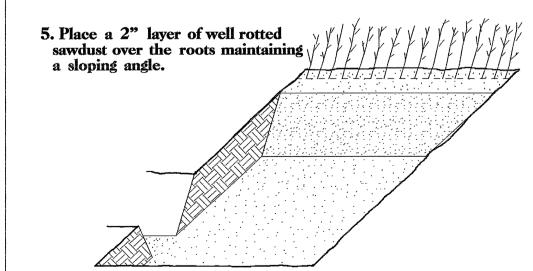


6. Repeat layers of plants and sawdust as necessary and water thoroughly.


DIBBLE PLANTING METHOD USING THE KBC PLANTING BAR

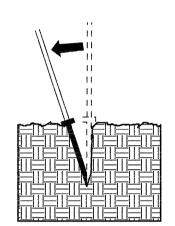


1. Insert planting bar as shown and pull handle toward planter.

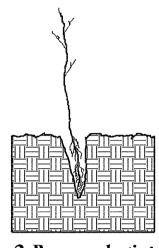


2. Remove planting bar and place seedling at correct depth.

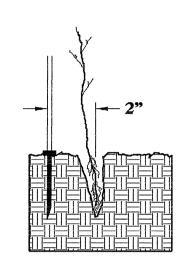


3. Insert planting bar 2" toward planter from

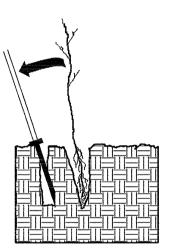

4. Pull handle of bar toward planter, firming soil at bottom.

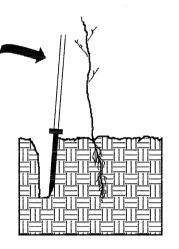

5. Push handle forward firming soil at top.

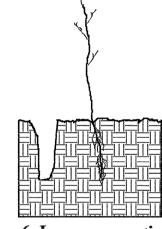

6. Leave compaction hole open. Water thoroughly.


PLANTING NOTES:

PLANTING BAG
During planting, seedlings shall be kept in a moist canvas bag or similar container to prevent the root systems from drying.



KBC PLANTING BAR
Planting bar shall have a
blade with a triangular
cross section, and shall
be 12" long, 4" wide and
1" thick at center.

ROOT PRUNING
All seedlings shall be root
pruned, if necessary, so that
no roots extend more than
10 inches (10") below the



STATE	STAT	B PROJECT REFERENCE NO.	SHEET NO.	TOTAL SHEETS
N.C.		B-3899	RF-1	
STATE PROJ.NO.		F. A. PROJ. NO.	DESCRIPTION	

REFORESTATION

TREE REFORESTATION SHALL BE PLANTED 6' TO 10' ON CENTER, RANDOM SPACING, AVERAGING 8' ON CENTER, APPROXIMATELY 680 PLANTS PER ACRE.

REFORESTATION

MIXTURE, TYPE, SIZE, AND FURNISH SHALL CONFORM TO THE FOLLOWING:

25% CORNUS FLORIDA
FLOWERING DOGWOOD 12" – 18", SEEDLING BR
25% PLATANUS OCCIDENTALIS
SYCAMORE
12" – 18", SEEDLING BR

REFORESTATION DETAIL SHEET

N.C.D.O.T. - ROADSIDE ENVIRONMENTAL UNIT